


Subject: Пример подключения точка - точка

Document No.:LC-T0005	Issue Date: Sep. 12, 2006
Document Type:	Model number: Venus SIP Series
H/W Version:	S/W Version:

Подключение FXS – FXS

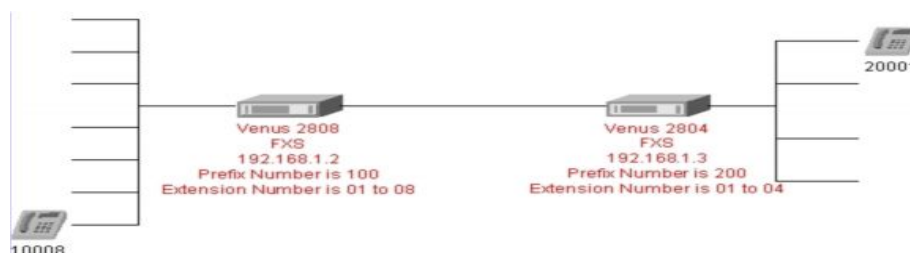

Venus 2808 Settings →

- ✓ Configuration → System → SIP Basic Configuration

```

Configuration TAINET Venus 2808S Version 1.50 - Bld 7.0
-----
[System] Interface Routing Table Phone Book Security
System Configuration

SIP Basic Configuration
Host Name [Venus ]
Prefix Number [100 ]
Wildcard Registrar Number [ ]
Transport Way [UDP]
Local Port [5060 ]
Use Proxy Server [no ]
Use Registration [no ]
Use Public Account [no ]
Use Alert Info [no ]
NAT Pass Through [disable]
NAT Remote IP [0.0.0.0 ]
Stun Server IP [0.0.0.0 ]

Press: '0' - '9' . ' ' . SPACE . BS . <0.0.0.0: off>
TAB,ENTER:next field '<':left '>':right ESC:abort
  
```

- ✓ Configuration → Interface → FXO/FXS (Пример настройки порта #1)

```

Interface TAINET Venus 2808S Version 1.50 - Bld 7.0
-----
[FXO/FXS] WAN LAN NAT Analog Life-Line
FXO/FXS Configuration

Port 1
Use Registrar [No Register]
Proxy Server [Primary Proxy]
Display Name [User1 ]
Use Private Account [no ]
Phone Extension [01 ]
Line Reversal [disable]
Use Hot Line [no ]
Call Forward [disable]
Call ID Blocking [disable]
Rx Gain(-14..14) [0 ]
Tx Gain(-14..14) [0 ]

Press: SPACE to select
TAB,ENTER:next field '<':left '>':right ESC:abort
  
```

Document No.: LC-T0005	Issue Date: Sep. 12, 2006
Document Type: General	Model number: Venus SIP Series
H/W Version:	S/W Version:

✓ Configuration → Interface → WAN Configuration

```

Interface                               TAINET Venus 2808S      Version 1.50 - Bld 7.0
-----
FX0/FXS [WAN ] LAN      NAT      Analog  Life-Line
WAN Configuration

                                     If you want set the static IP address , please disable
                                     DHCP/BootP function first

WAN

Ethernet Type      10/100Base-T
IP Address         [192.168.1.2 ]
Net Mask           [255.255.255.0 ]
Default GW         [192.168.1.254_ ]
PPP over ethernet [disable]

Press: '0' - '9', '.', SPACE, BS
TAB,ENTER:next field '<':left '>':right ESC:abort
    
```

✓ Configuration → Phone Book (Телефонная книга содержит записи об адресах других ШЛЮЗОВ)

```

Configuration                               TAINET Venus 2808S      Version 1.50 - Bld 7.0
-----
System  Interface  Routing Table  [Phone Book]  Security
Phone Book Configuration

00


Name      [User1      ]
Number    [20001      ]
Address   [192.168.1.3 ]
Port      [5060 ]
Valid     [yes]

                                     Fill in the third party dial information

Press: SPACE to select
TAB,ENTER:next field '<':left '>':right ESC:abort
    
```

✓ Device Control → Warm Start (Перезагрузка)

Подключение FXS – FXO

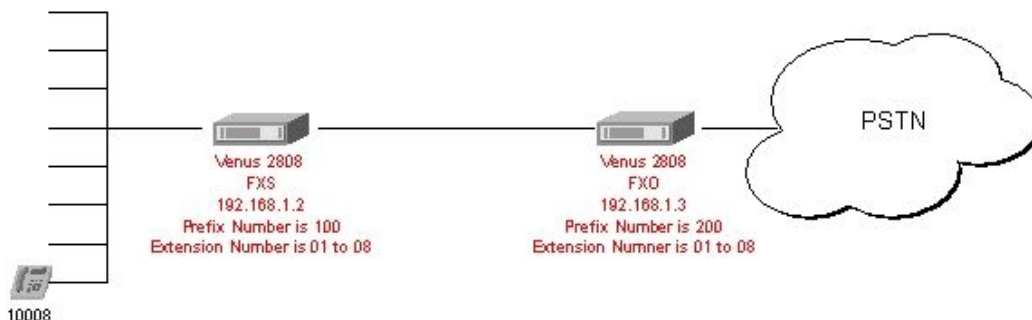

✓ Configuration → System → SIP Basic Configuration

```

Configuration                               TAINET Venus 2808S          Version 1.50 - Bld 7.0
-----
[System] Interface Routing Table Phone Book Security
System Configuration

SIP Basic Configuration
Host Name [Venus ]
Prefix Number [100 ]
Wildcard Registrar Number [ ]
Transport Way [UDP]
Local Port [5060 ]
Use Proxy Server [no ]
Use Registration [no ]
Use Public Account [no ]
Use Alert Info [no ]
NAT Pass Through [disable]
NAT Remote IP [0.0.0.0 ]
Stun Server IP [0.0.0.0 ]

Press: '0' - '9', '.', SPACE, BS, <0.0.0.0: off>
TAB,ENTER:next field '<':left '>':right ESC:abort
    
```

✓ Configuration → Interface → FXO/FXS (Пример настройки порта #1)

```

Interface                               TAINET Venus 2808S          Version 1.50 - Bld 7.0
-----
[FXO/FXS] WAN LAN NAT Analog Life-Line
FXO/FXS Configuration

Port 1
Use Registrar [No Register]
Proxy Server [Primary Proxy]
Display Name [User1 ]
Use Private Account [no ]
Phone Extension [01 ]
Line Reversal [disable]
Use Hot Line [yes] — Enable Hot-line Function
Call Forward [disable ]
Call ID Blocking [disable]
Rx Gain(-14..14) [0 ]
Tx Gain(-14..14) [0 ]

Press: SPACE to select
TAB,ENTER:next field '<':left '>':right ESC:abort
    
```



台聯電訊股份有限公司

TAINET COMMUNICATION SYSTEM CORP.

No.25, Alley 15, Lane 120, Sec. 1, Nei-Hu Rd.,

Taipei, Taiwan, R.O.C. <http://www.tainet.net>

TEL: +886-2-26583000 FAX: +886-2-26583232

Technical Notice

```
Interface TAINET Venus 2808S Version 1.50 - Bld 7.0
-----
[FX0/FXS] WAN LAN NAT Analog Life-Line
FX0/FXS Configuration

Port 1
Use Registrar [No Register]
Use Hot Line

Hot Line Number [20001]
Dial Tone Timeout(form 0 to 10 sec) [0_]

Call Forward [disable]
Call ID Blocking [disable]
Rx Gain(-14..14) [0]
Tx Gain(-14..14) [0]

Press: '0' - '9', SPACE, BS
TAB,ENTER:next field '<':left '>':right ESC:abort
```

✓ Configuration → Interface → WAN Configuration

```
Interface TAINET Venus 2808S Version 1.50 - Bld 7.0
-----
FX0/FXS [WAN] LAN NAT Analog Life-Line
WAN Configuration

WAN

Ethernet Type 10/100Base-T
IP Address [192.168.1.2]
Net Mask [255.255.255.0]
Default GW [192.168.1.254_]
PPP over ethernet [disable]

Press: '0' - '9', '.', SPACE, BS
TAB,ENTER:next field '<':left '>':right ESC:abort
```

✓ Configuration → Phone Book (Телефонная книга содержит записи об адресах других шлюзов)

```
Configuration TAINET Venus 2808S Version 1.50 - Bld 7.0
-----
System Interface Routing Table [Phone Book] Security
Phone Book Configuration

00

Name [User1]
Number [20001]
Address [192.168.1.3]
Port [5060]
Valid [yes]

Press: SPACE to select
TAB,ENTER:next field '<':left '>':right ESC:abort
```

✓ Device Control → Warm Start (Перезагрузка)



台聯電訊股份有限公司

TAINET COMMUNICATION SYSTEM CORP.

No.25, Alley 15, Lane 120, Sec. 1, Nei-Hu Rd.,

Taipei, Taiwan, R.O.C. <http://www.tainet.net>

TEL: +886-2-26583000 FAX: +886-2-26583232

Technical Notice

Document No.: LC-T0005	Issue Date: Sep. 12, 2006
Document Type: General	Model number: Venus SIP Series
H/W Version:	S/W Version:
<p>Данный пример рассмотрен для шлюзов Venus 2808. Настройки для FXO и FXO идентичны</p>	